


HexKey Cascades


HexKey Cascades are round, and install with an Allen wrench. They may be installed with minimal clearance or very close together where space is limited.

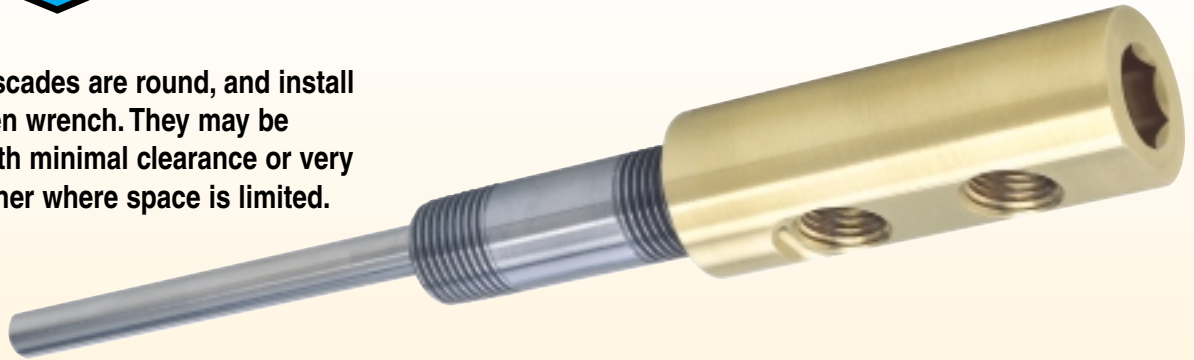

ASSEMBLIES

CATALOG NUMBER	M PIPE NIPPLE (NPT)	P PIPE TAP SIZE (NPT)	T HIGH FLOW TUBE O.D.	H HEX KEY SIZE	L	C	A	NOMINAL CLEARANCE DRILL	D ACTUAL O.D.
E16N	1/16	1/16	1/8	5/16	1.625	9/16	1/2	5/8	.610
E16N-2	1/8	1/16	3/16	3/8	1.687	9/16	9/16	3/4	.735
E186N	1/8	1/8	3/16	3/8	1.875	11/16	9/16	7/8	.860
E181N	1/8	1/8	3/16	3/8	2.187	1"	9/16	7/8	.860
E146N	1/4	1/8	1/4	1/2	2.187	11/16	13/16	1"	.985
E146N-4	1/4	1/4	1/4	1/2	2.312	11/16	7/8	1"	.985
E141N	1/4	1/8	1/4	1/2	2.500	1"	13/16	1"	.985
E141N-4	1/4	1/4	1/4	1/2	2.625	1"	7/8	1"	.985
E381N-4	3/8	1/4	5/16	1/2	2.625	1"	7/8	1"	.985
E121N-4	1/2	1/4	3/8	1/2	2.812	1"	1"	1-1/4	1.235

- Assemblies include brass head, 12" high flow stainless tube, and 2" long galvanized pipe nipple.
- Easy to install and remove.

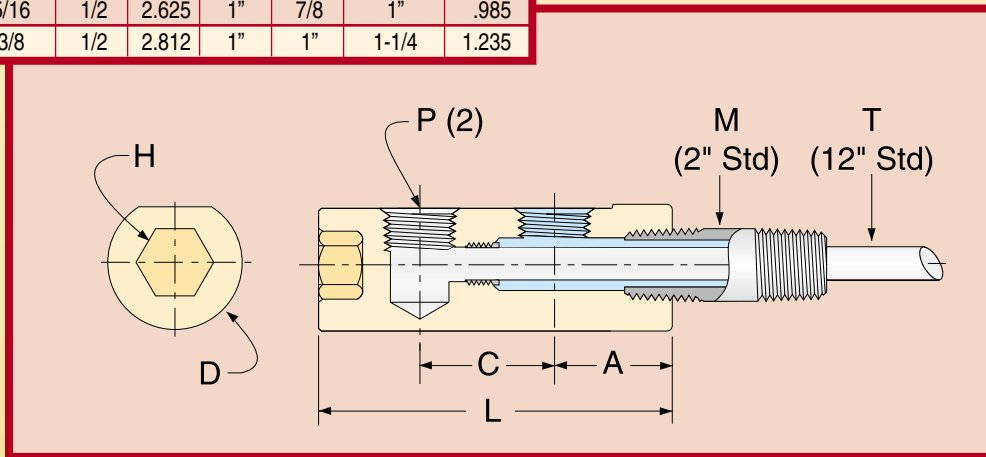

HEADS

CATALOG NUMBER	USE HIGH FLOW TUBE NUMBER
E16H	HF125T-
E16H-2	HF187T
E186H	HF187T-
E181H	HF187T-
E146H	HF250T-
E146H-4	HF250T-
E141H	HF250T-
E141H-4	HF250T-
E381H-4	HF312T-
E121H-4	HF375T-



- All dimensions are same as above assembly chart.
- HexKey Cascade heads use High Flow stainless tubes.